9. Schematic Diagrams

9-1 Power (230 Voltage) - - -

9-1 Power (230 Voltage)

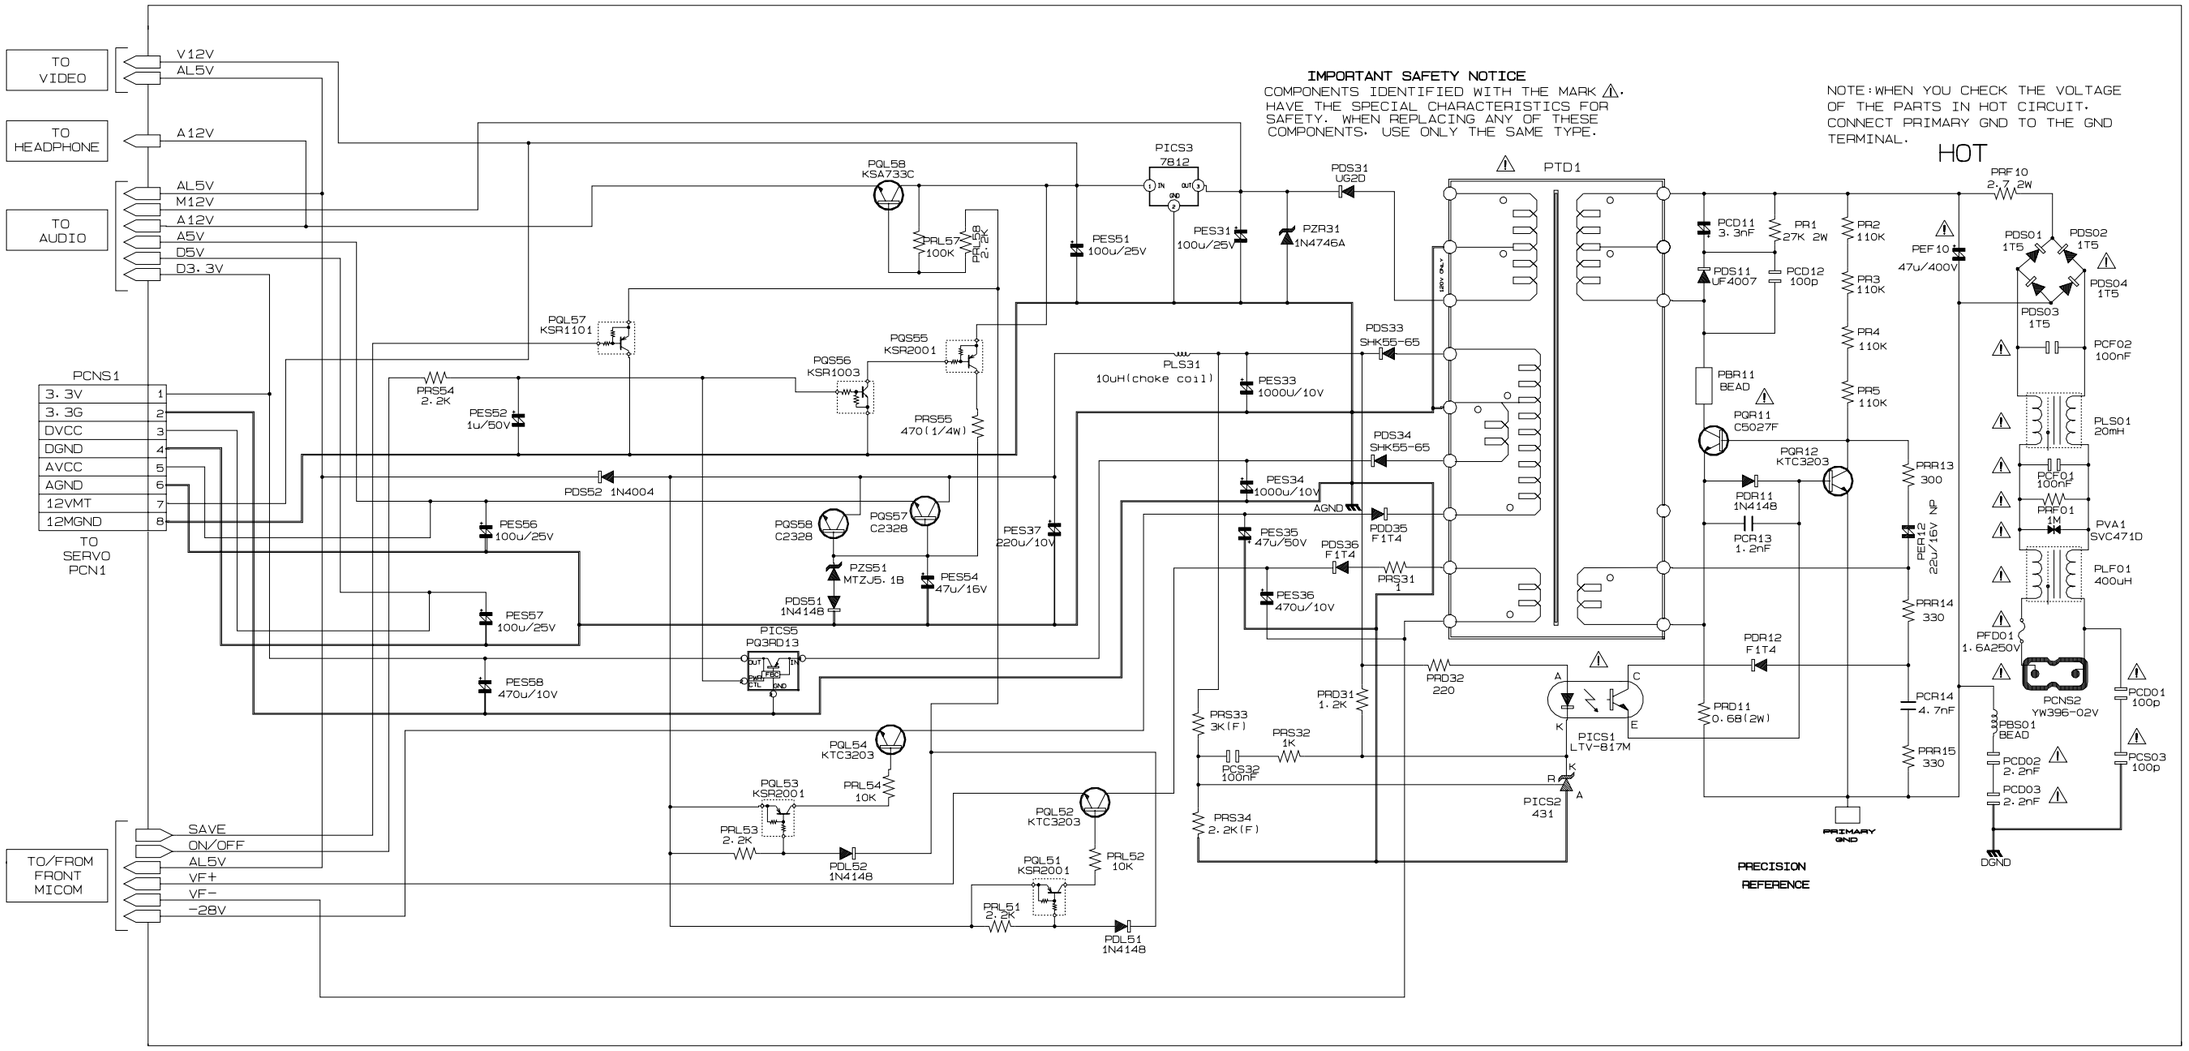

9-2 Power (Free Voltage)

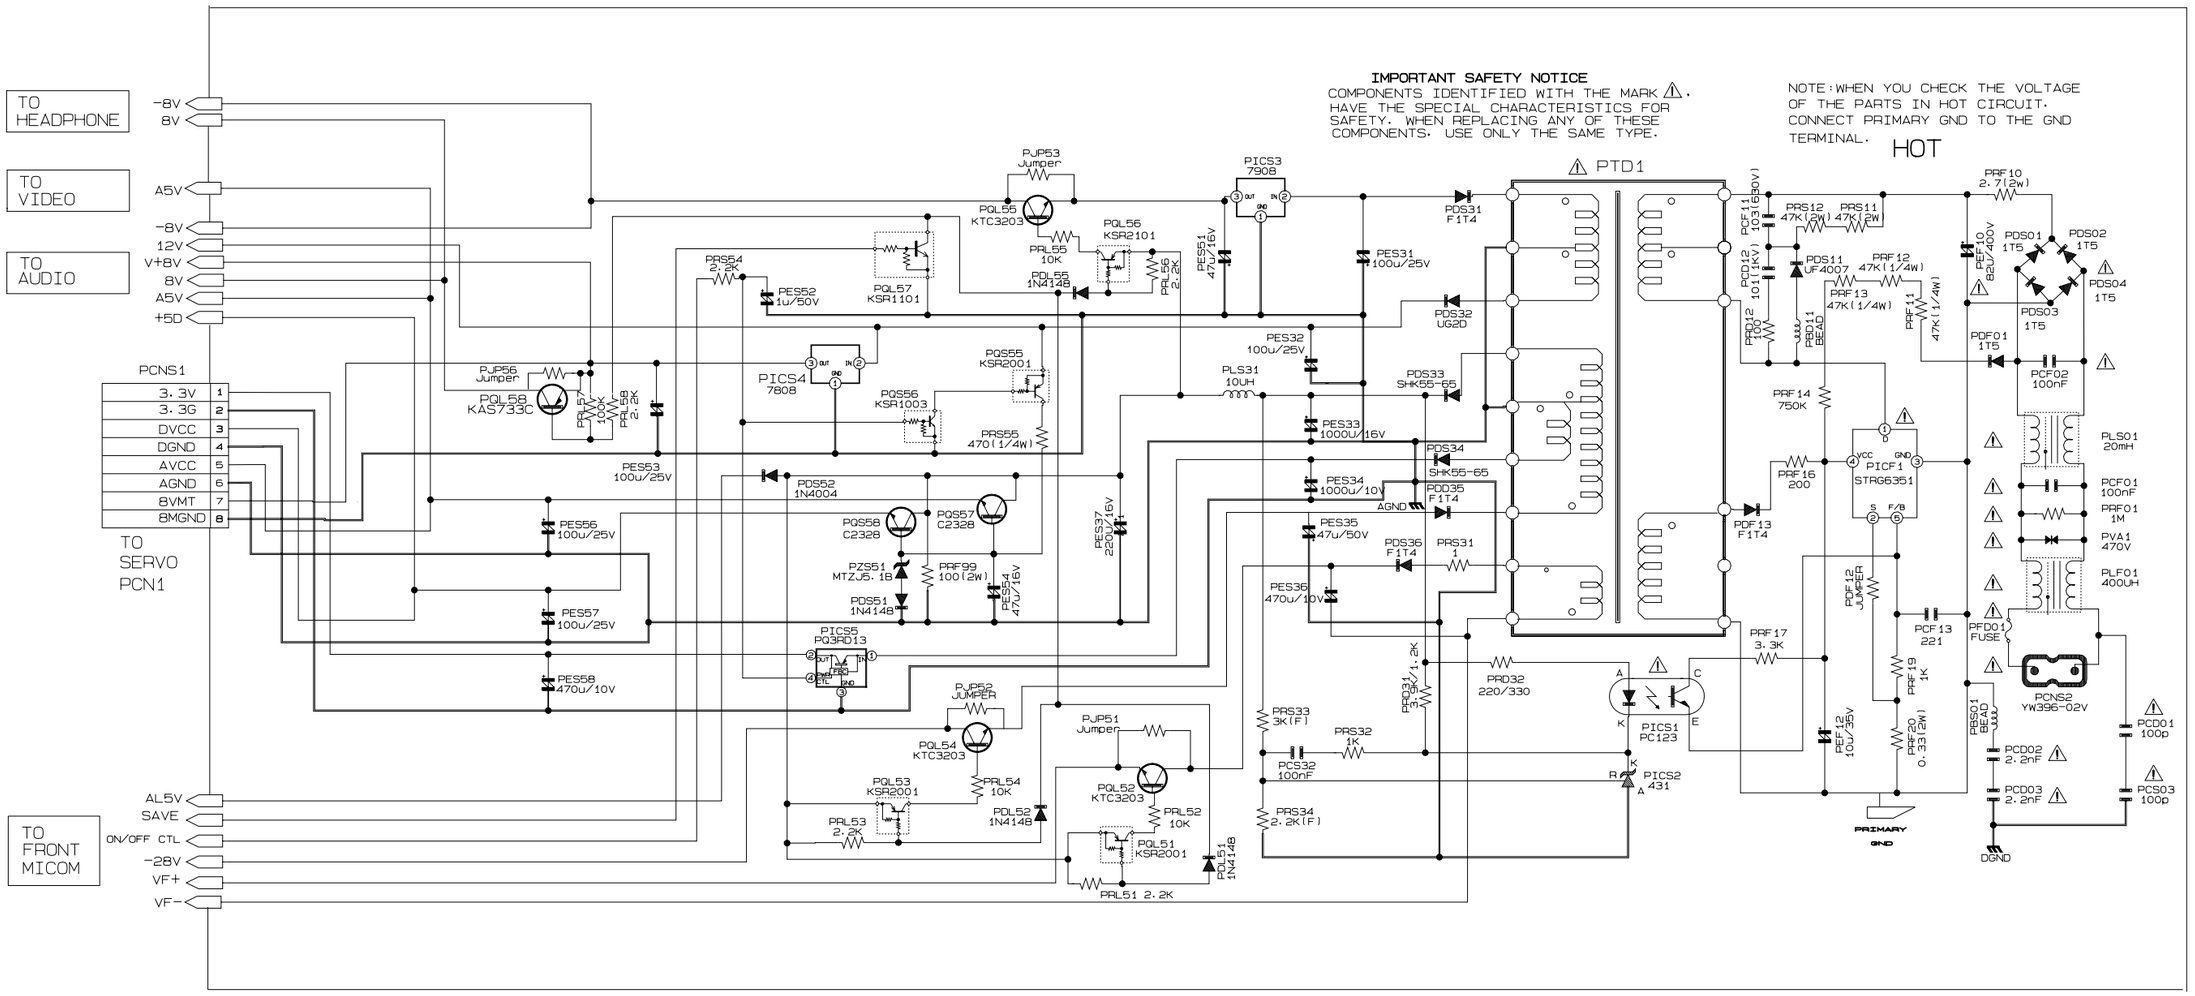

9-3 Main-Micom

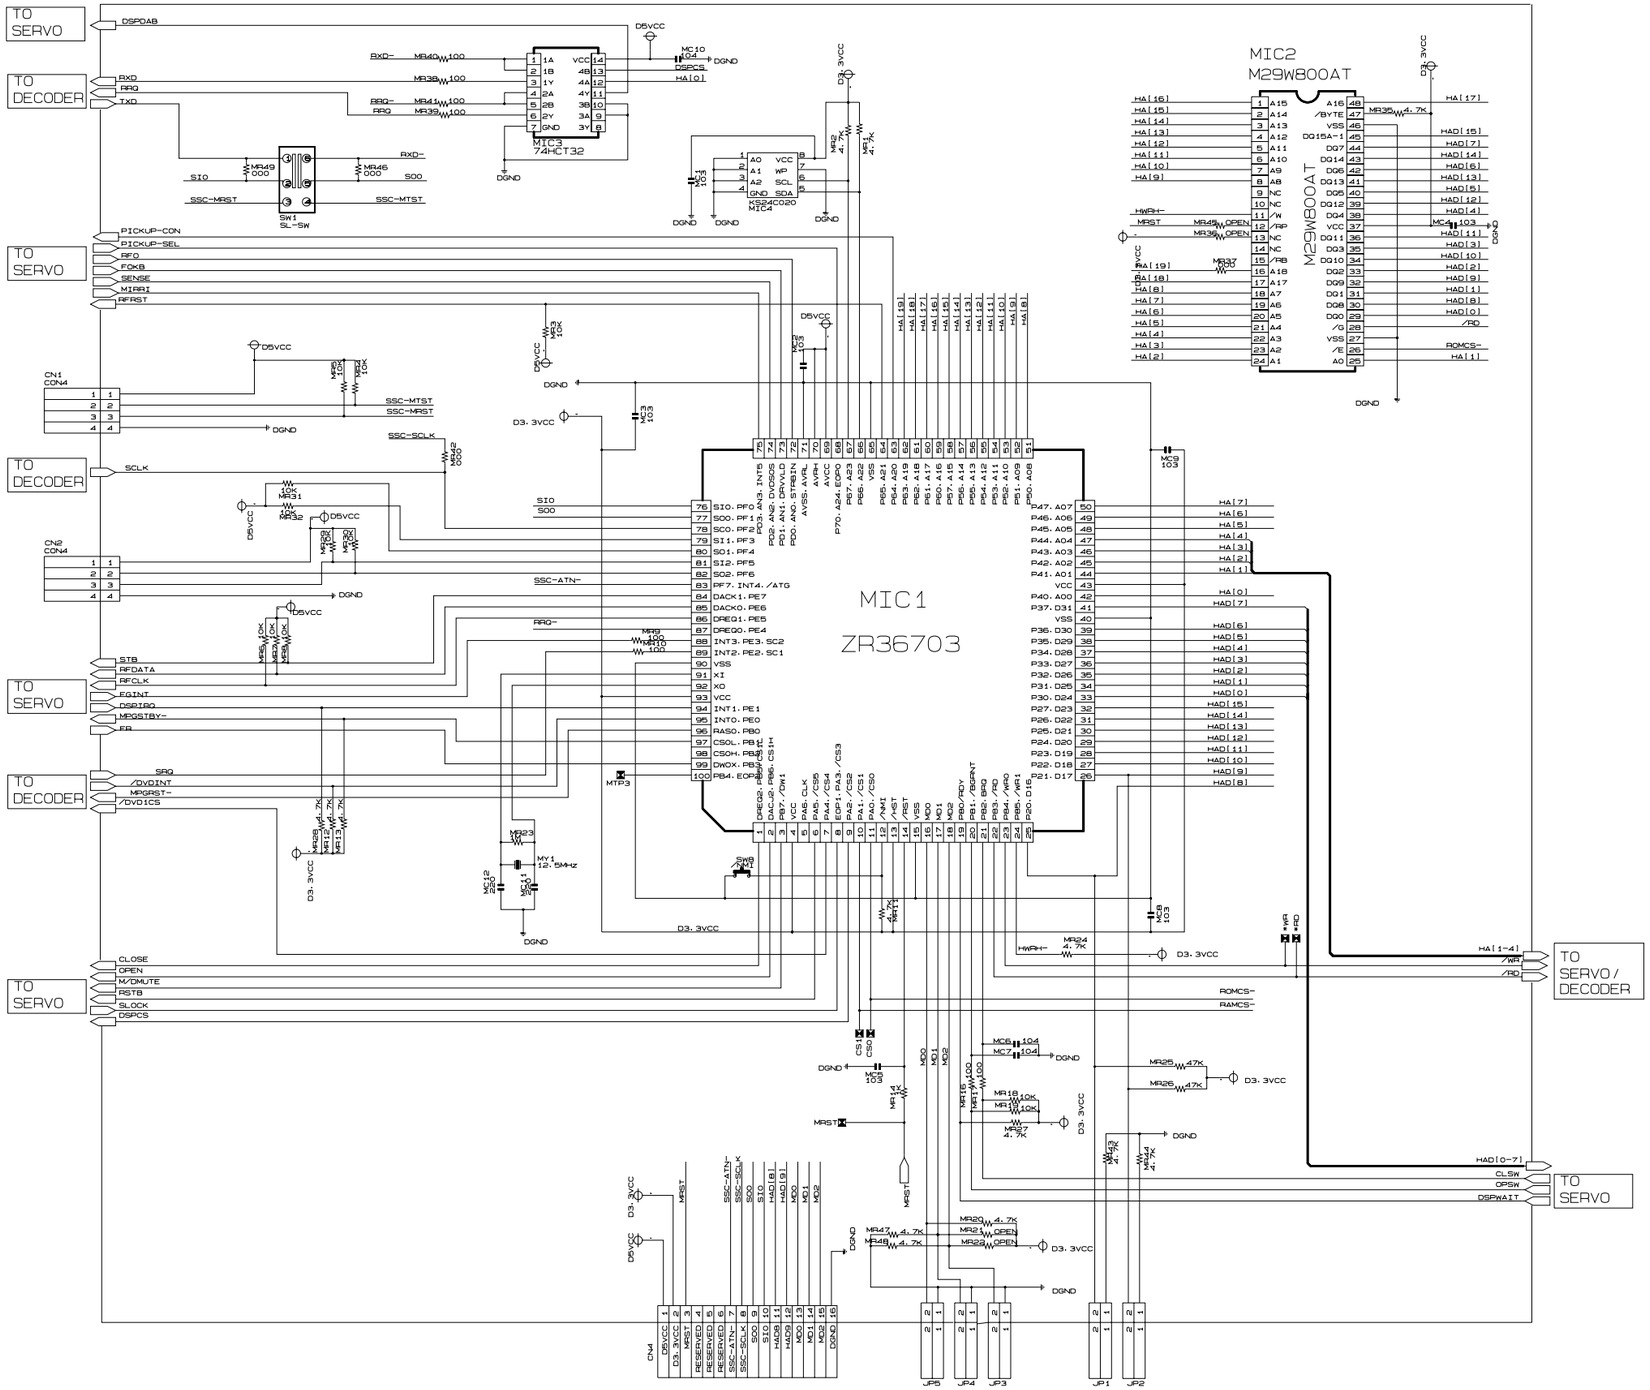

9-4 AV-Decoder

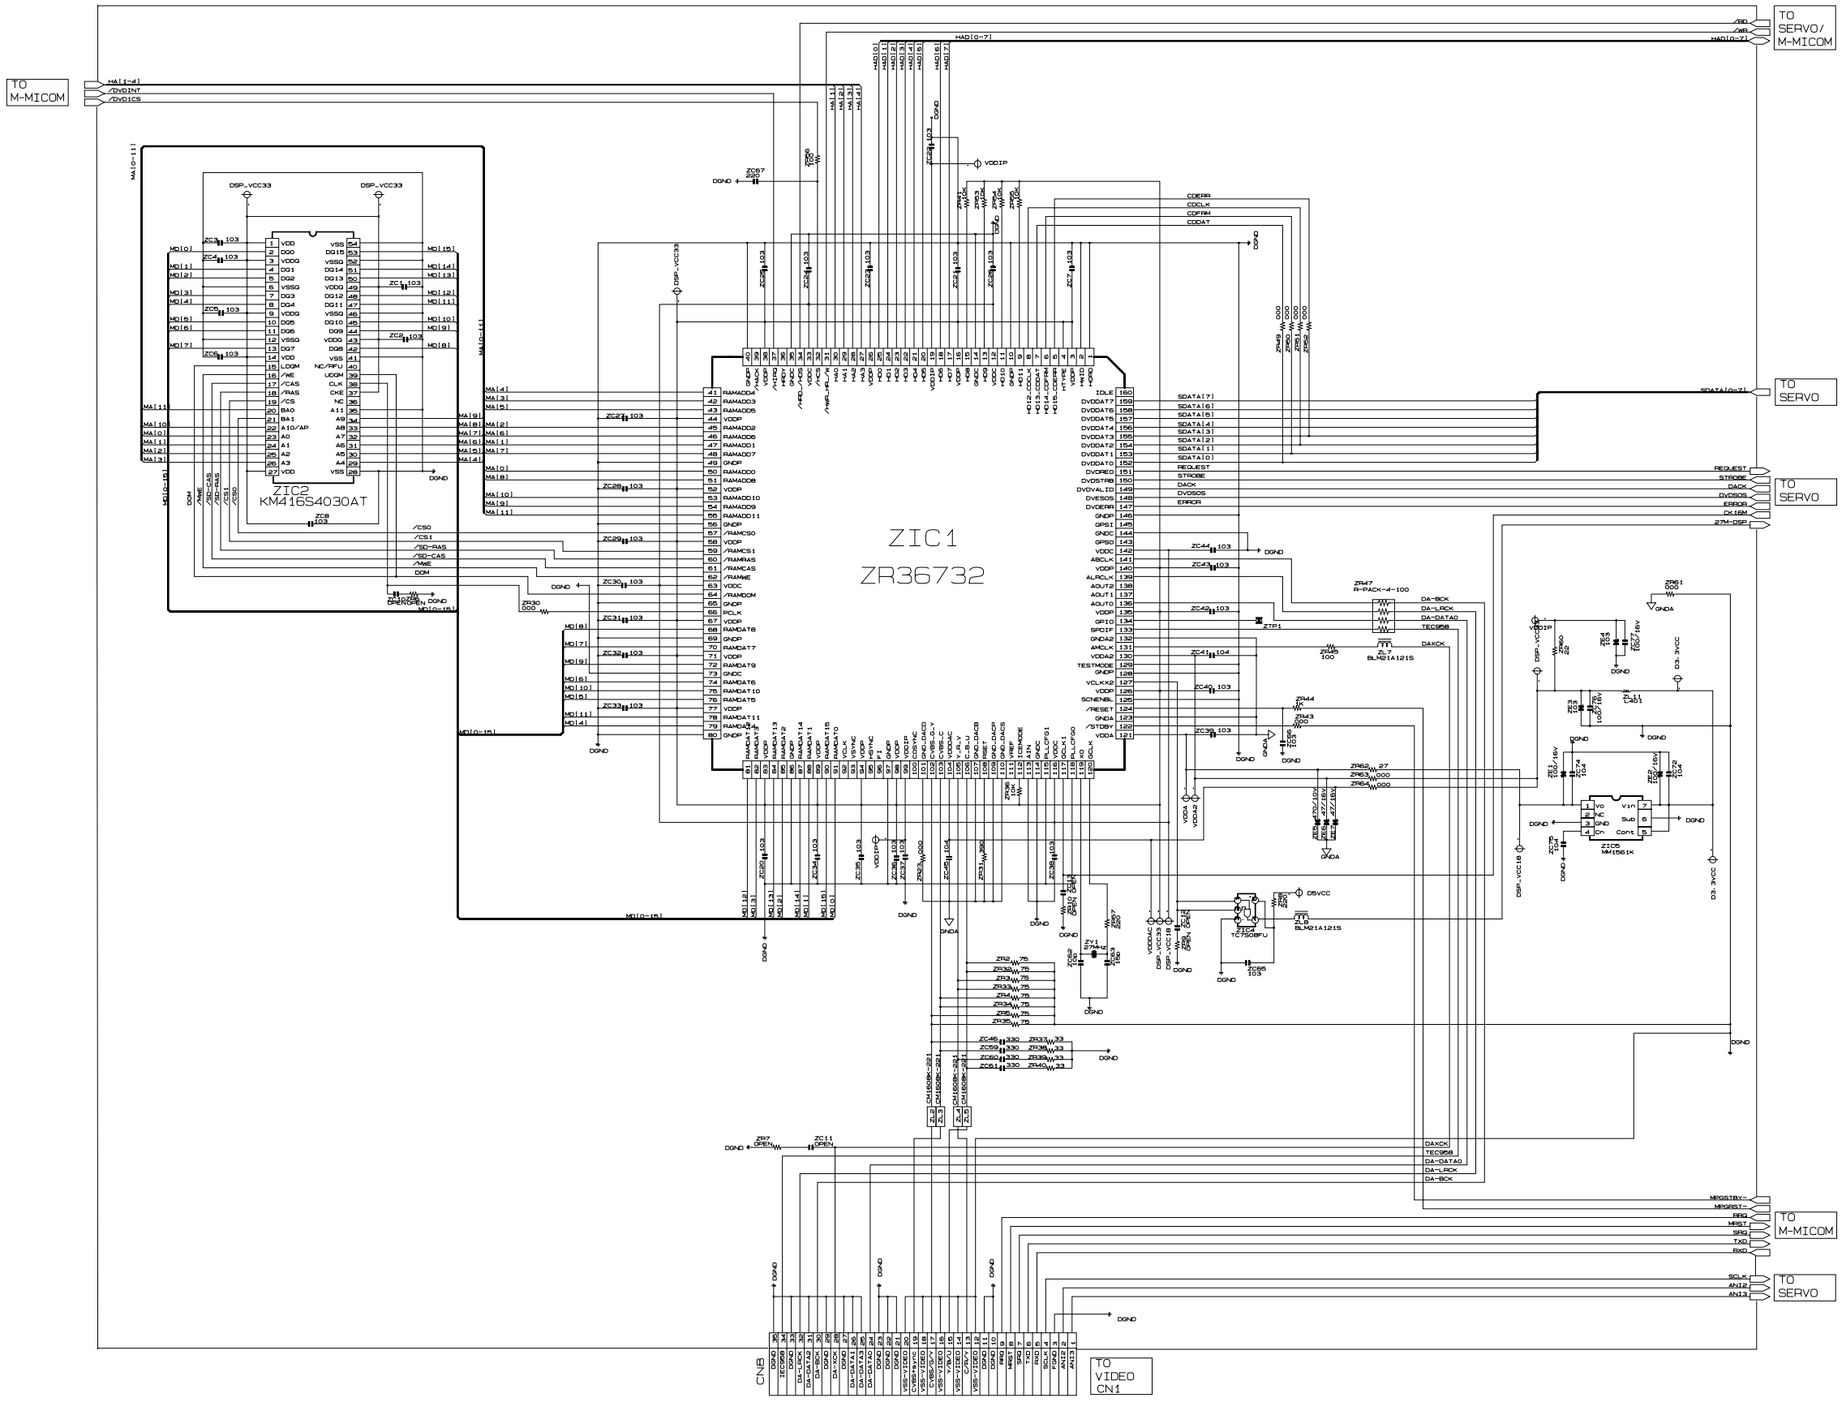

9-5 Servo/Key

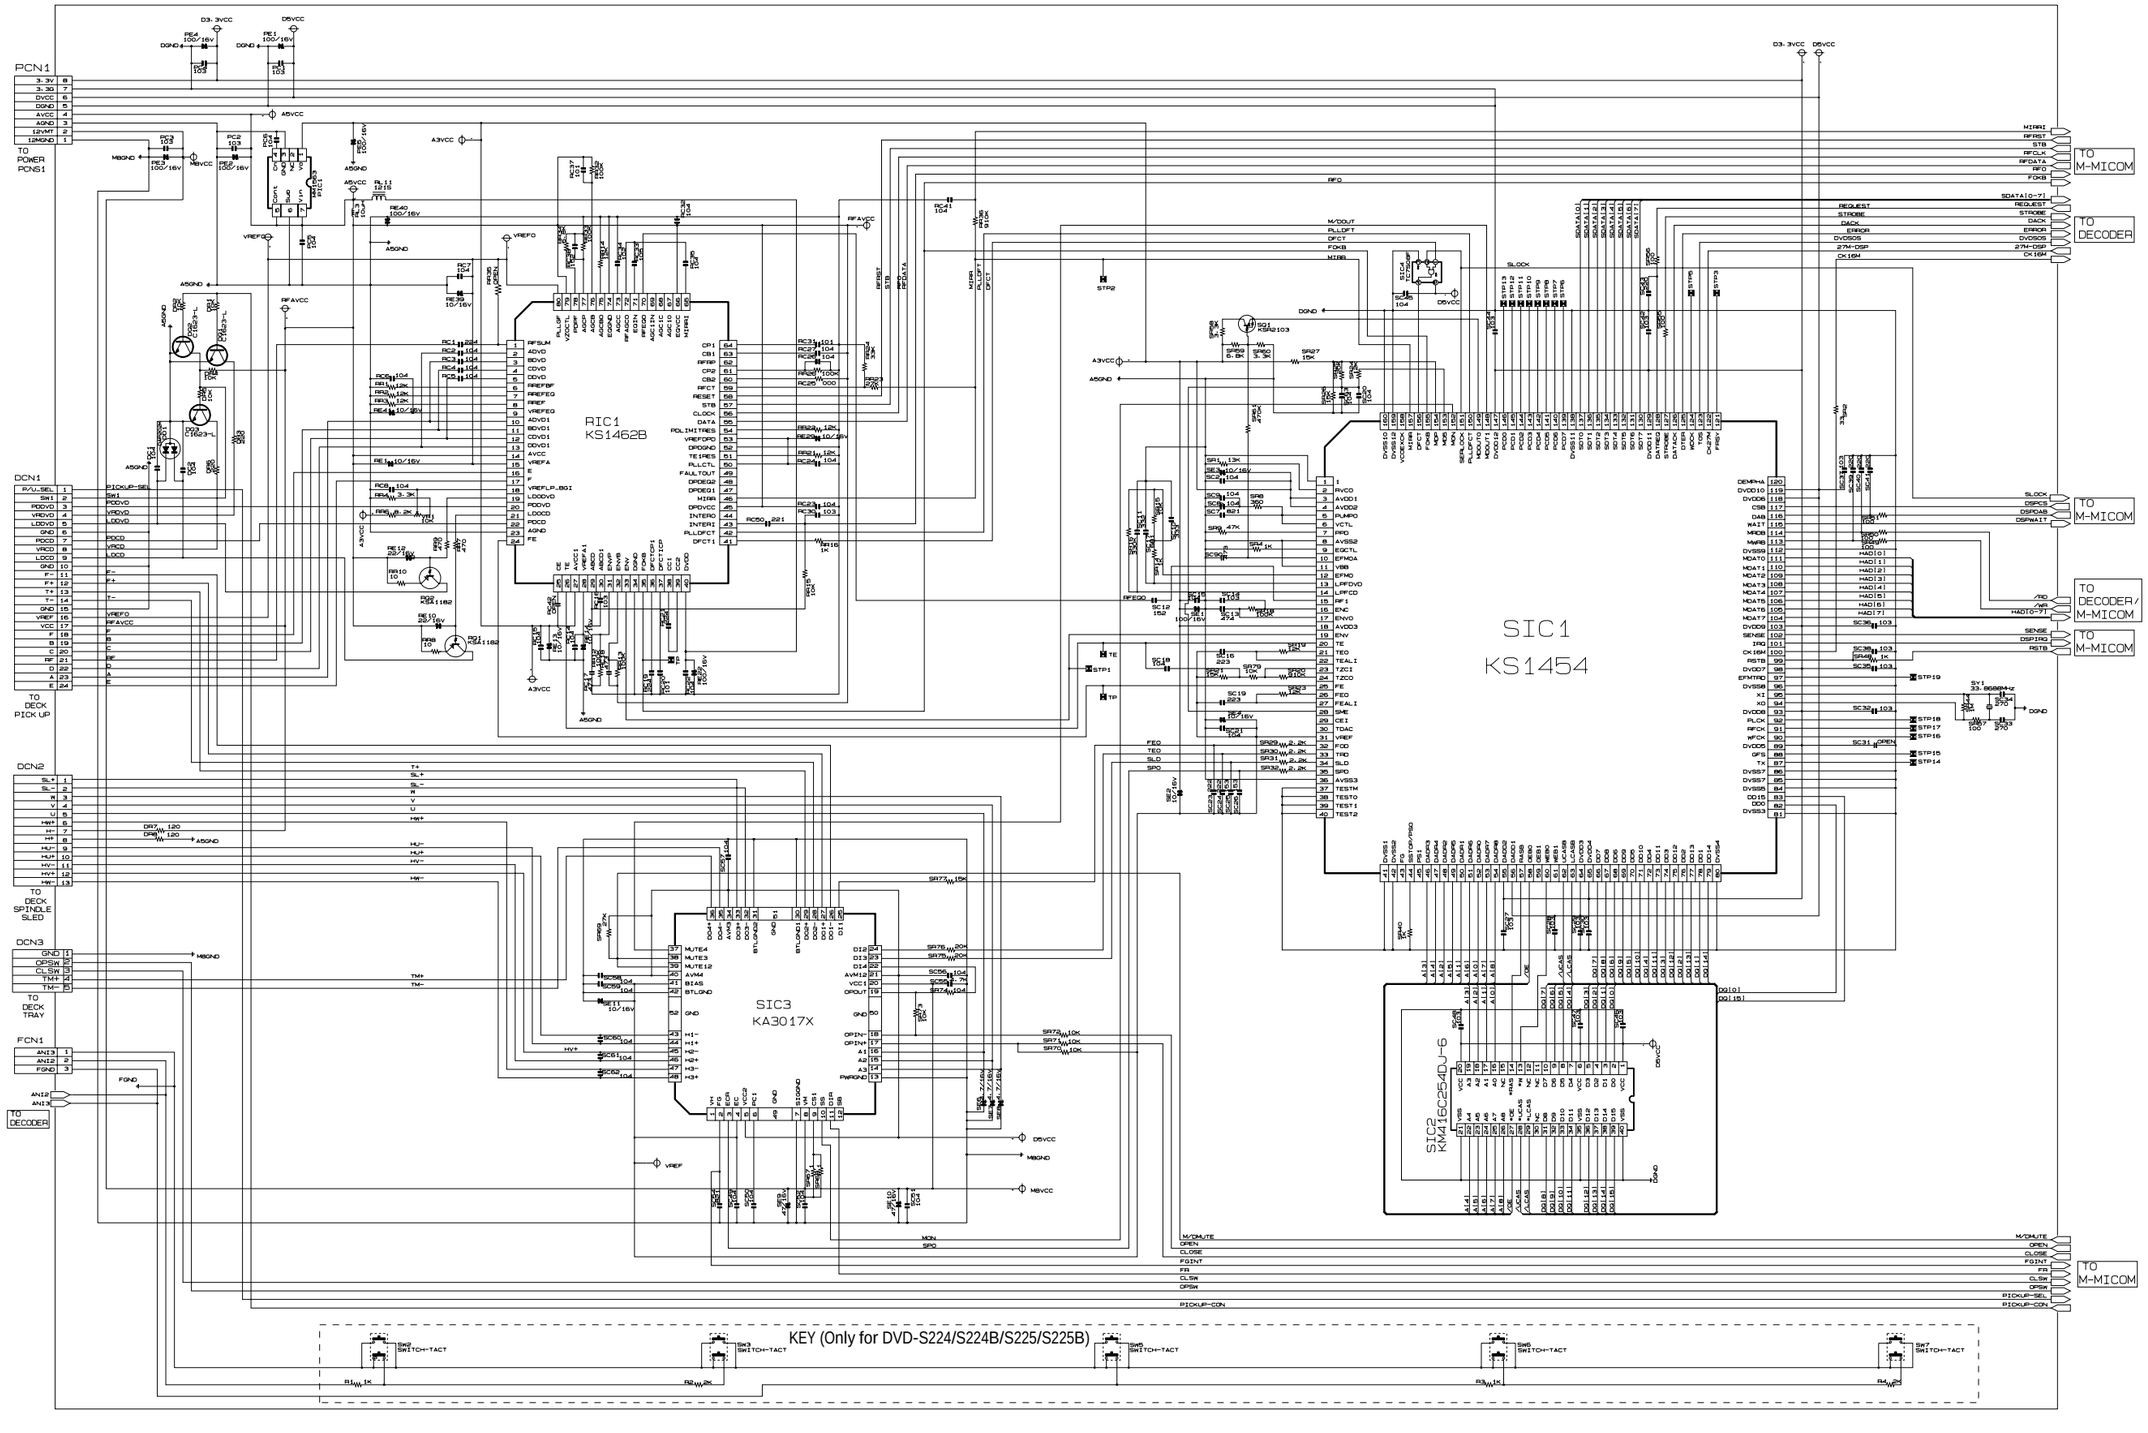
PCN1
TO POWER PCNS1
DCN1
TO DECK PICK UP
DCN2
TO DECK SPINDLE SLED
DCN3
TO DECK TRAY
FCN1
TO DECODER
RIC1
KS1462B
SIC1
KS1454
SIC2
KM416C254DJ-6
SIC3
KA3017X
KEY (Only for DVD-S224/S224B/S225/S225B)
Sw2 SWITCH-TACT
Sw3 SWITCH-TACT
Sw5 SWITCH-TACT
Sw6 SWITCH-TACT
Sw7 SWITCH-TACT
TO M-MICOM
TO DECODER
TO DECODER/ M-MICOM

9-6 Front-Micom/VFD Display (Only for DVD-S224/S224B/S225/S225B)

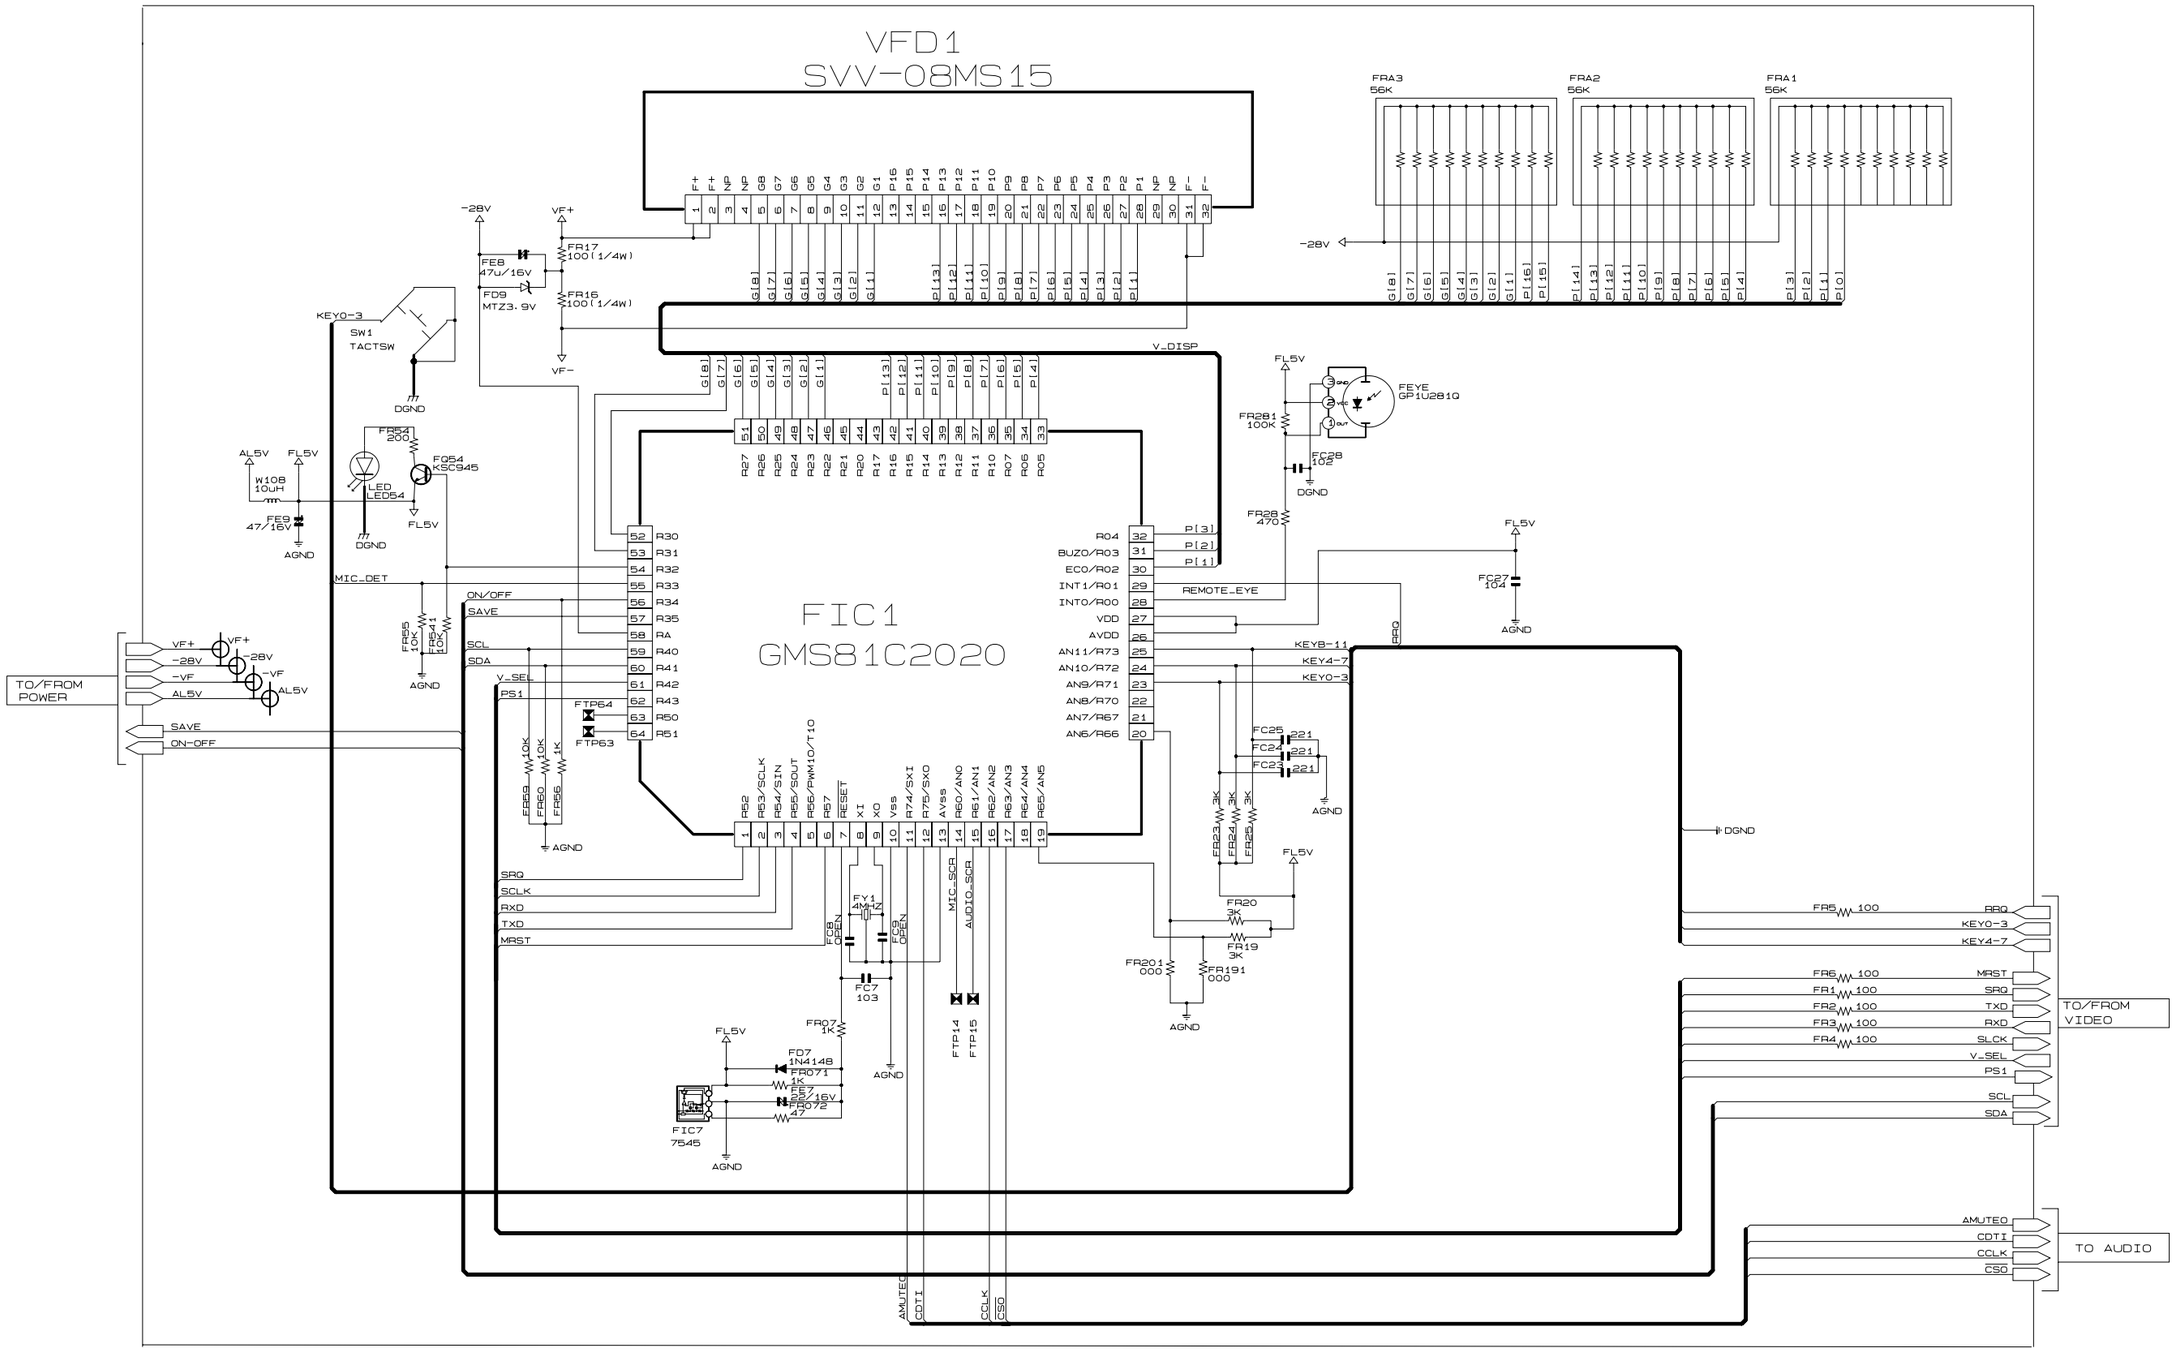

9-7 Front-Micom/VFD Display (Only for DVD-S324/S324B/S324W/S325/S325B)

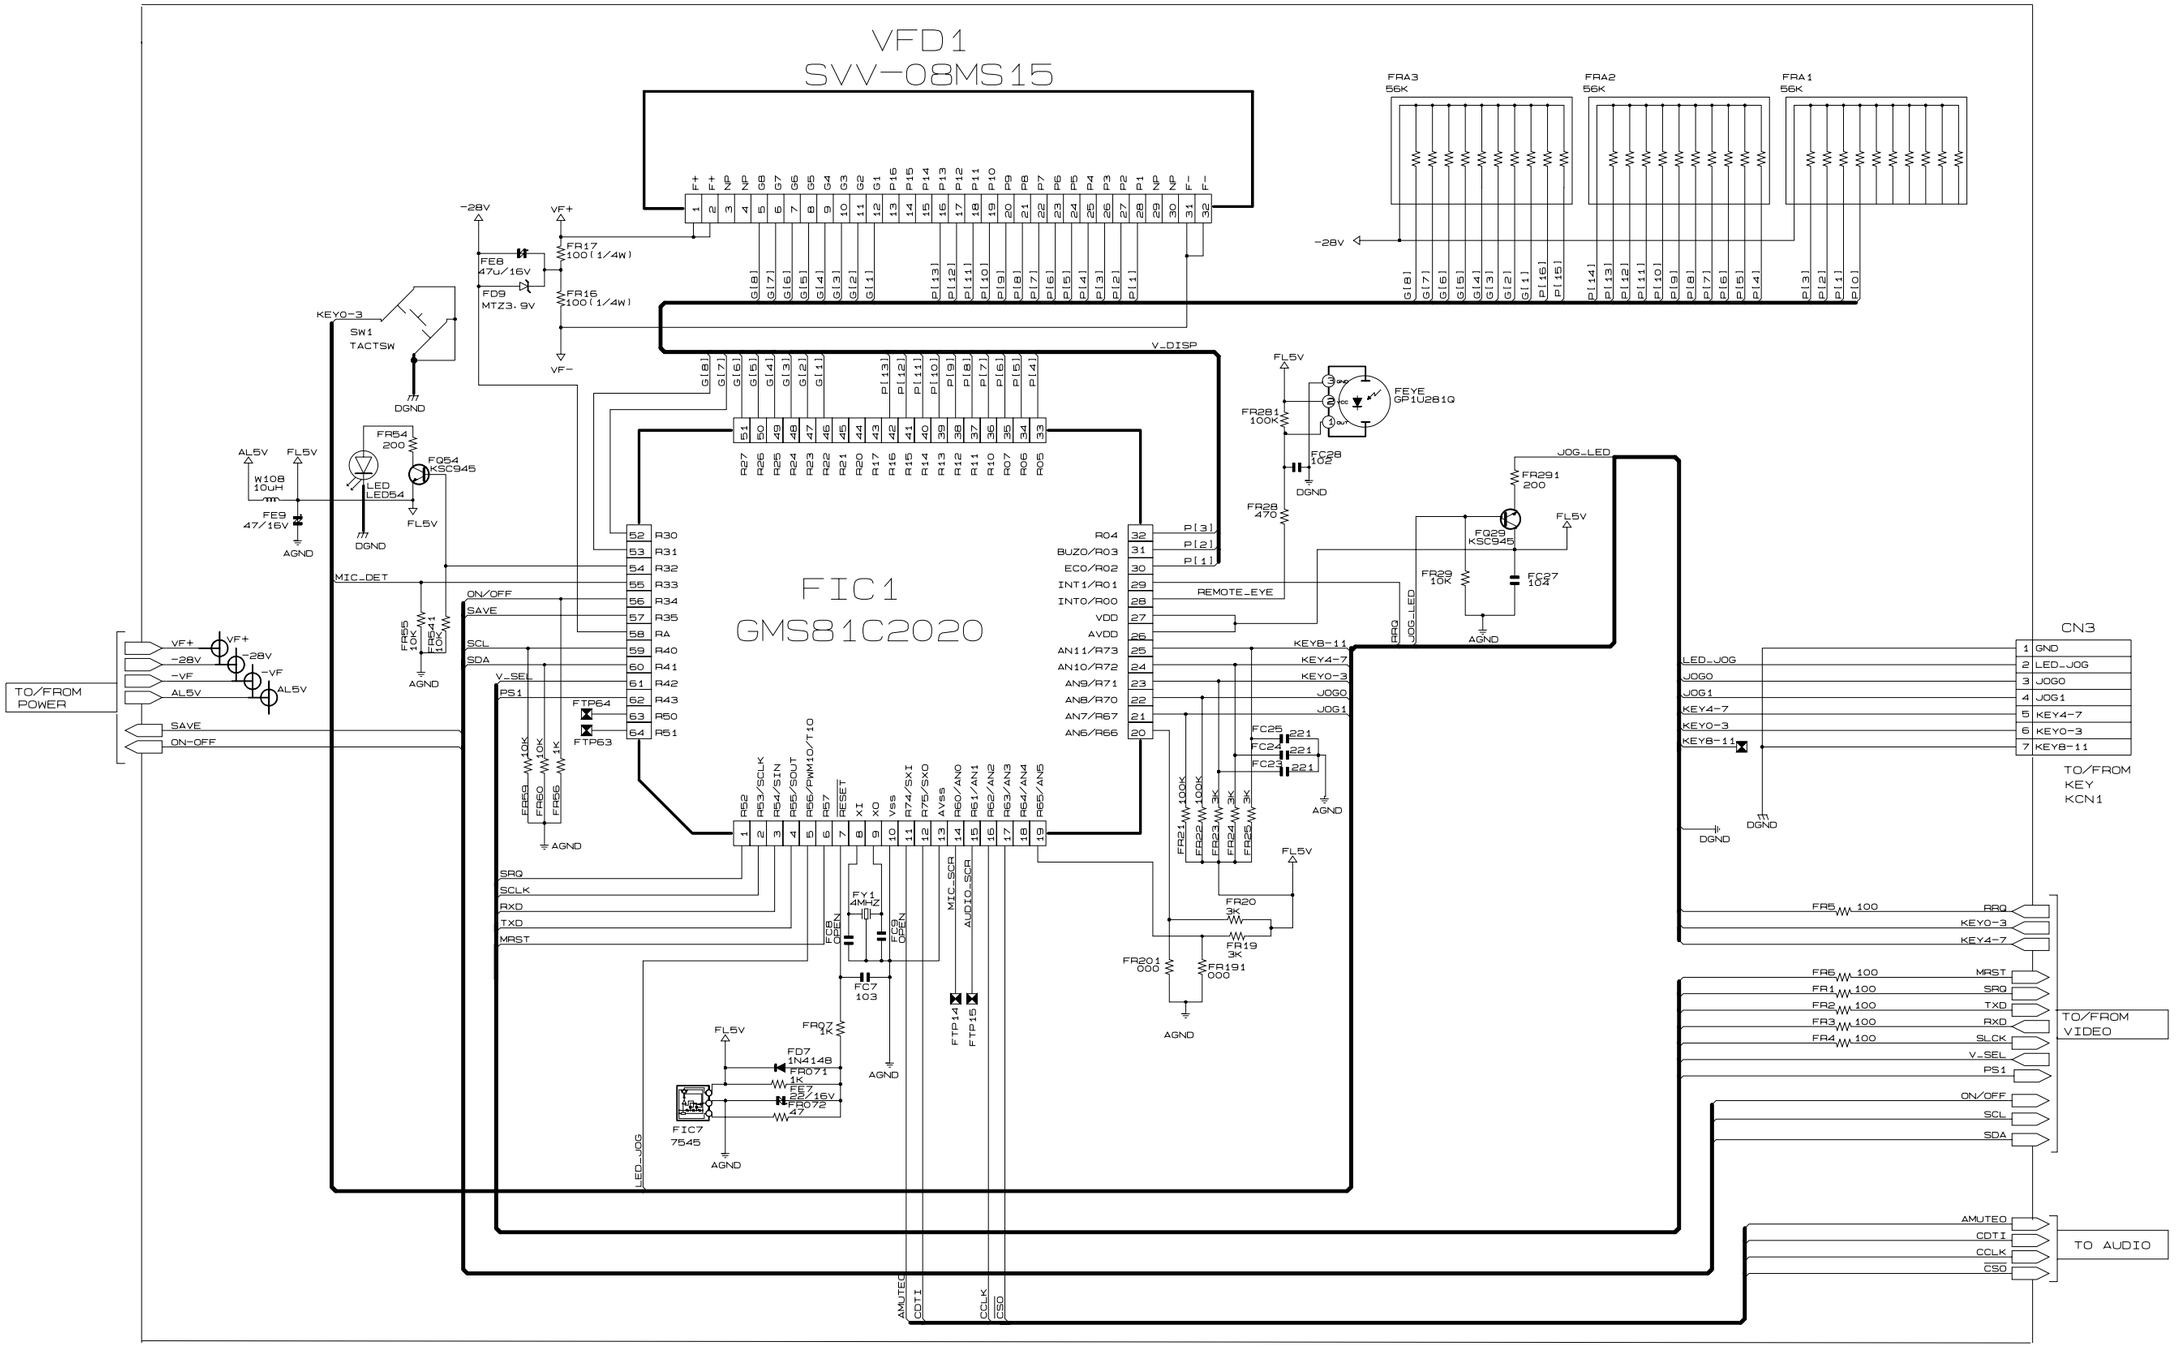

9-8 Video (Only for DVD-S224/S224B/S225/S225B)

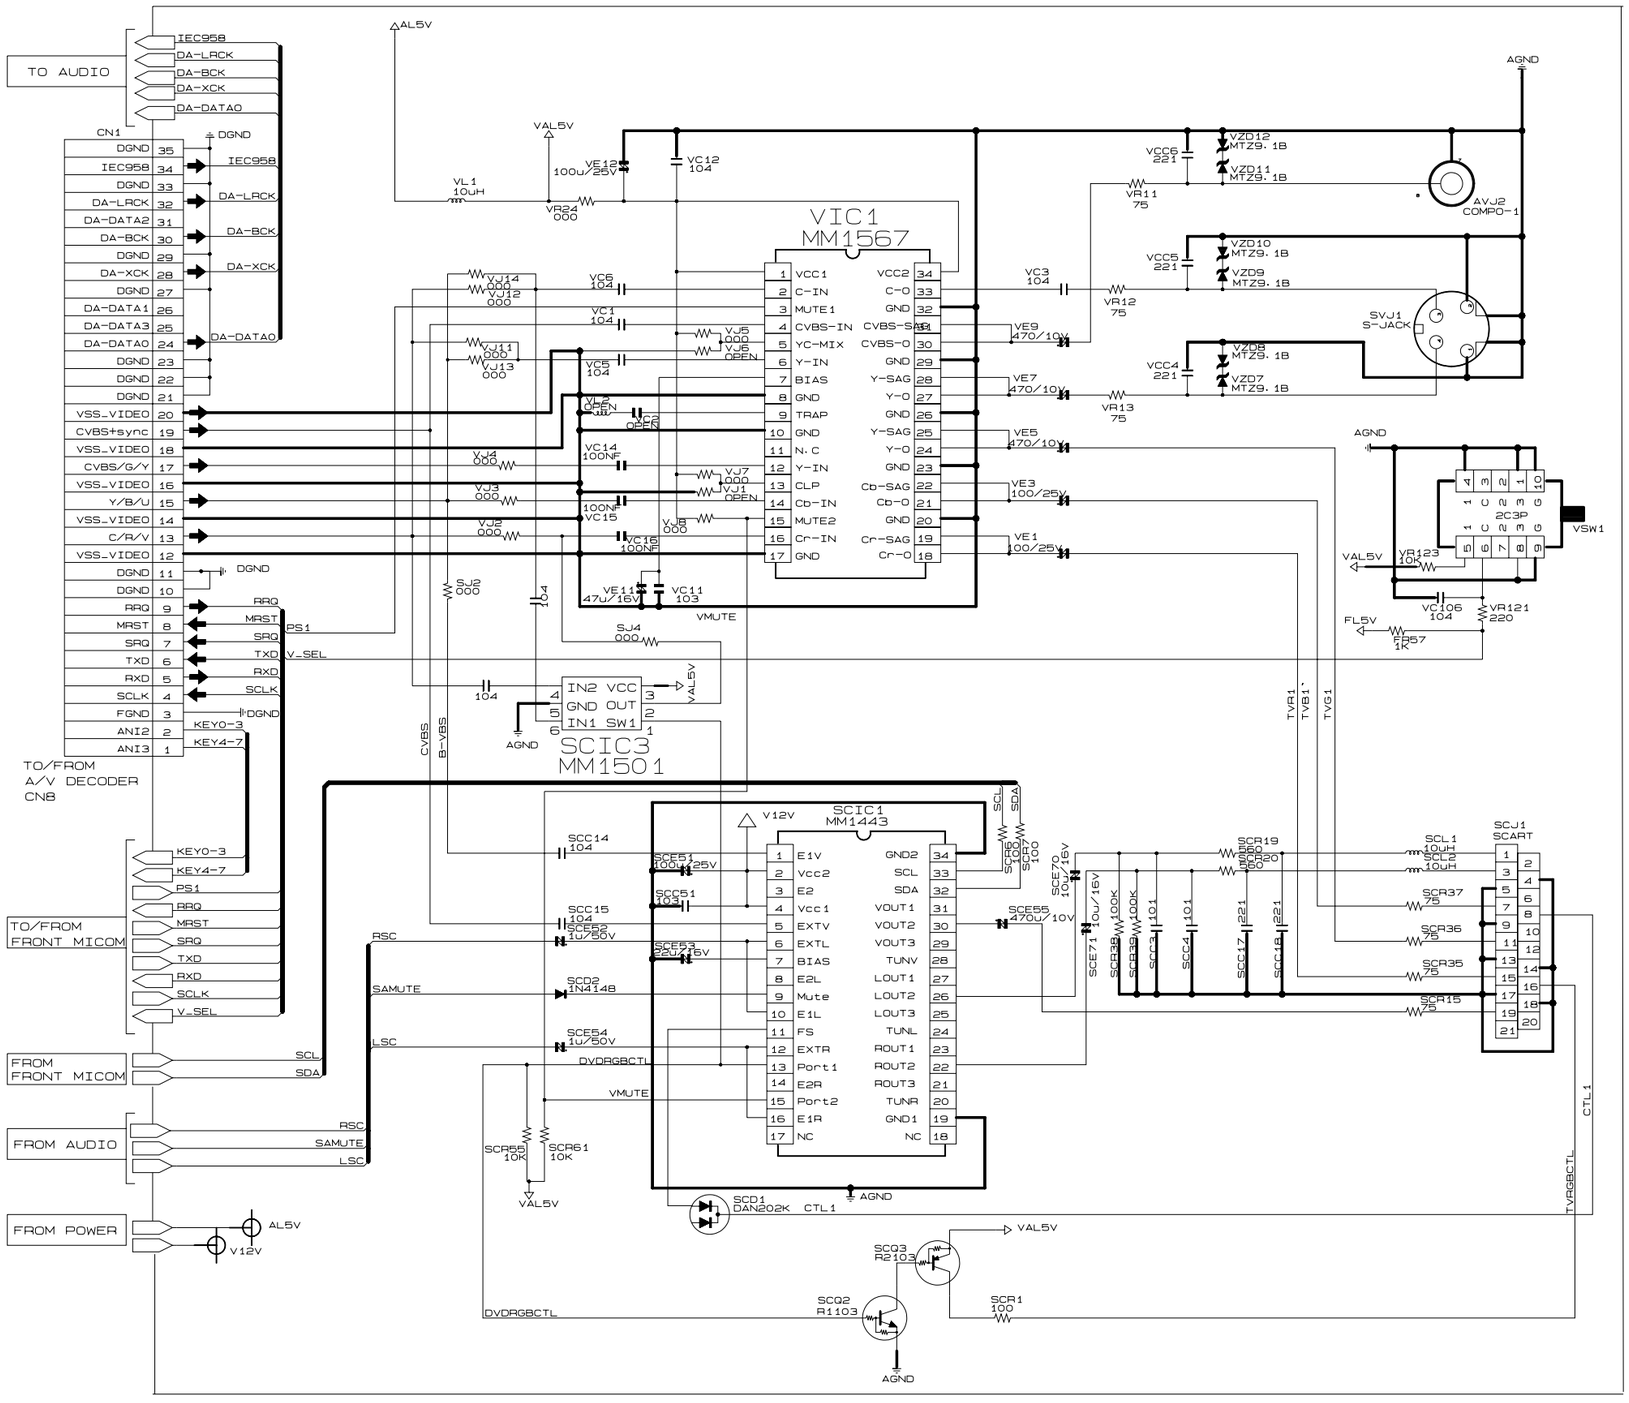

9-9 Video (Only for DVD-S324/S324B/S324W/S325/S325B)

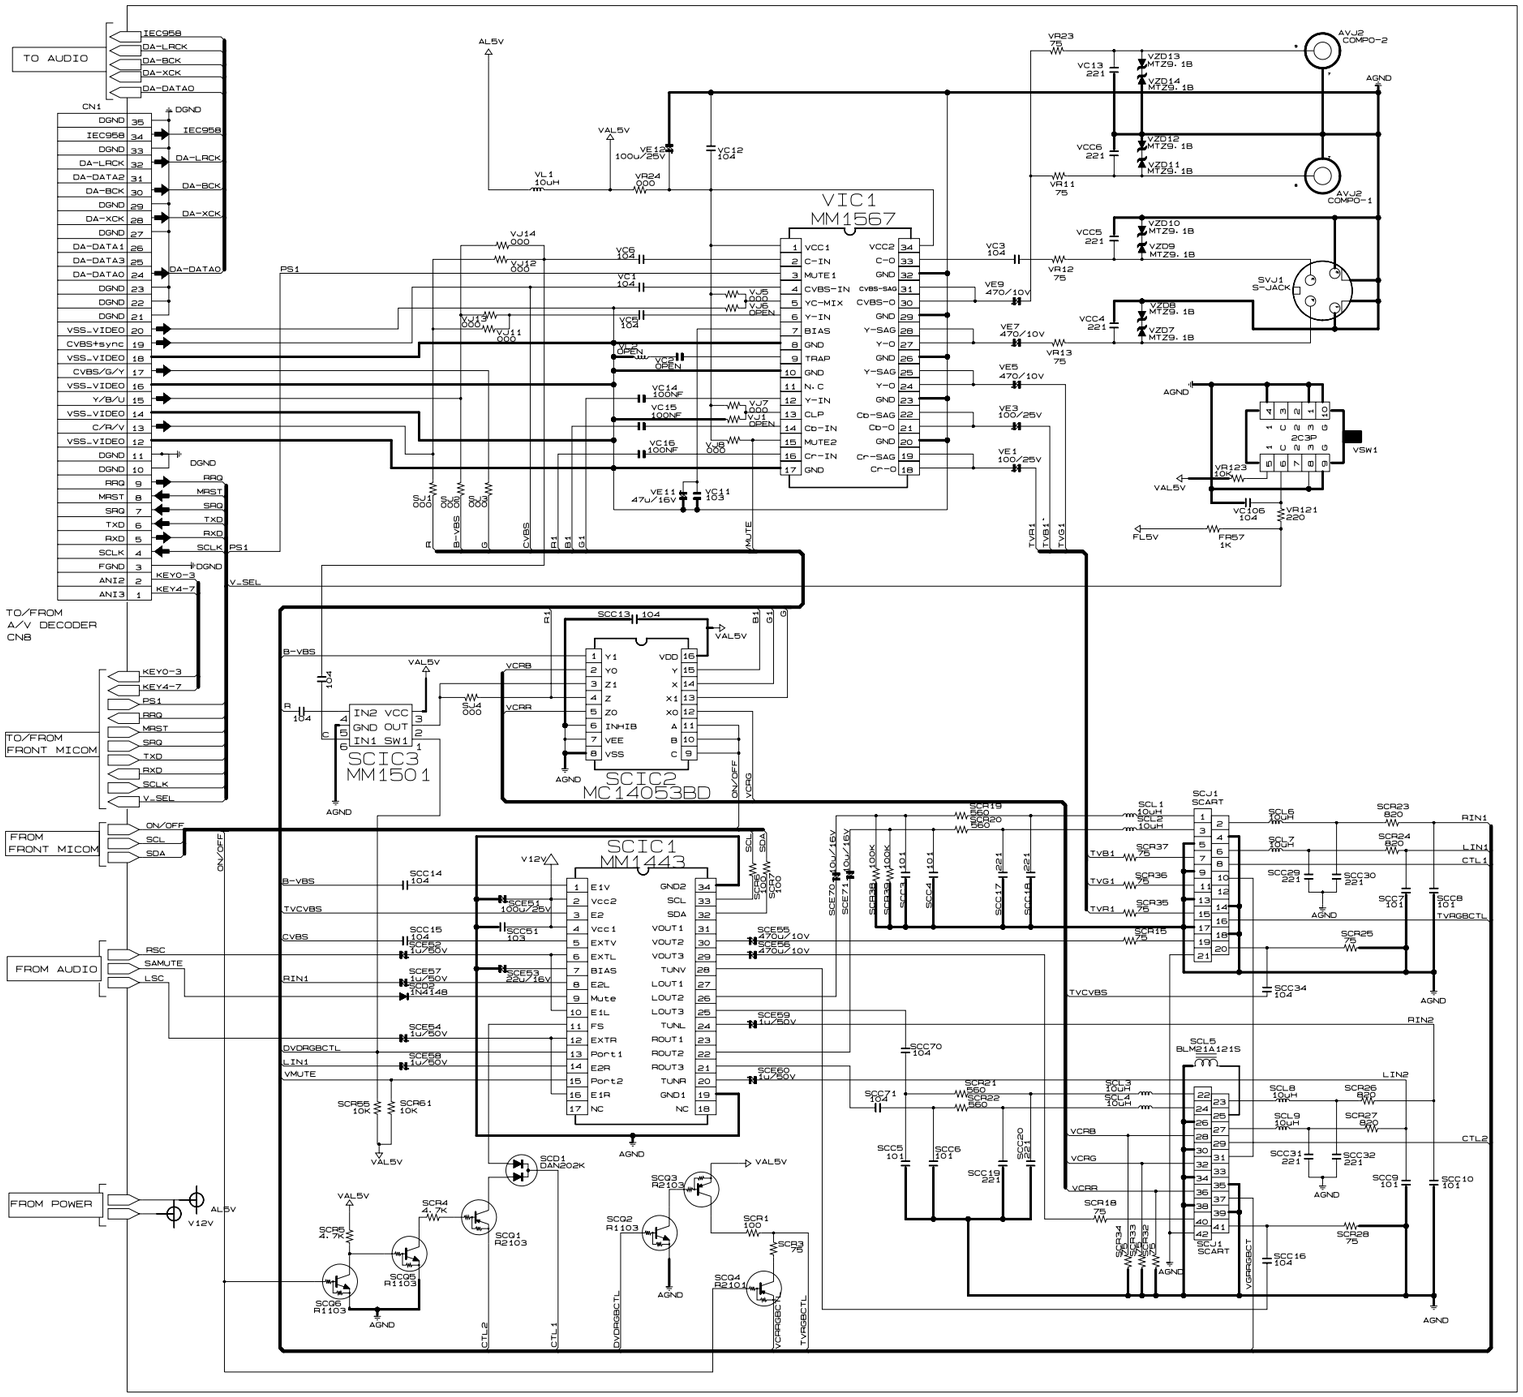

9-10 Audio (Only for DVD-S224/S224B/S225/S225B)

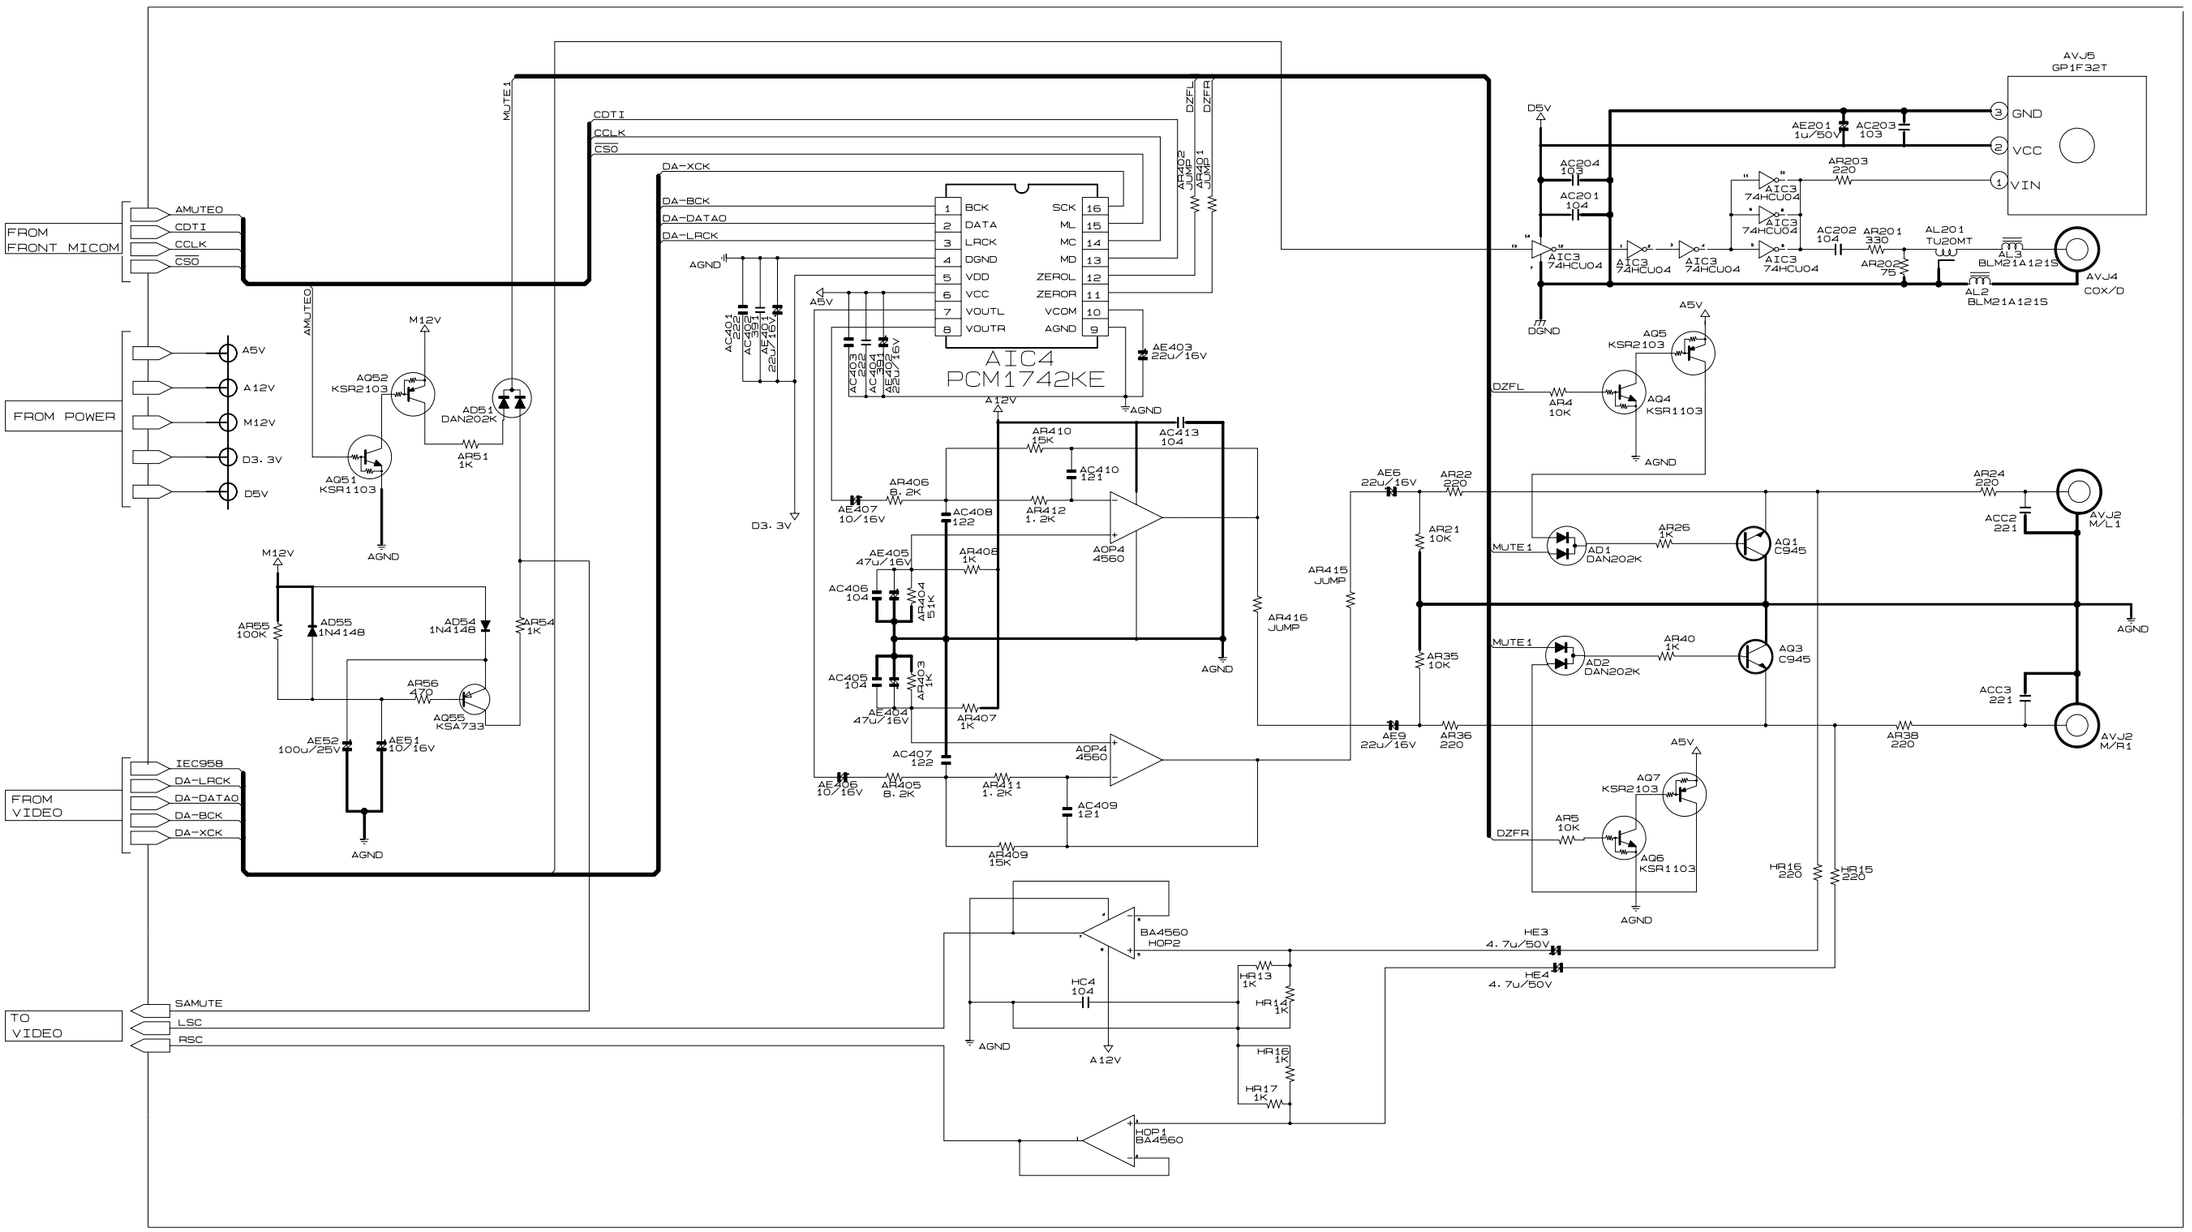

9-11 Audio (Only for DVD-S324/S324B/S324W/S325/S325B)

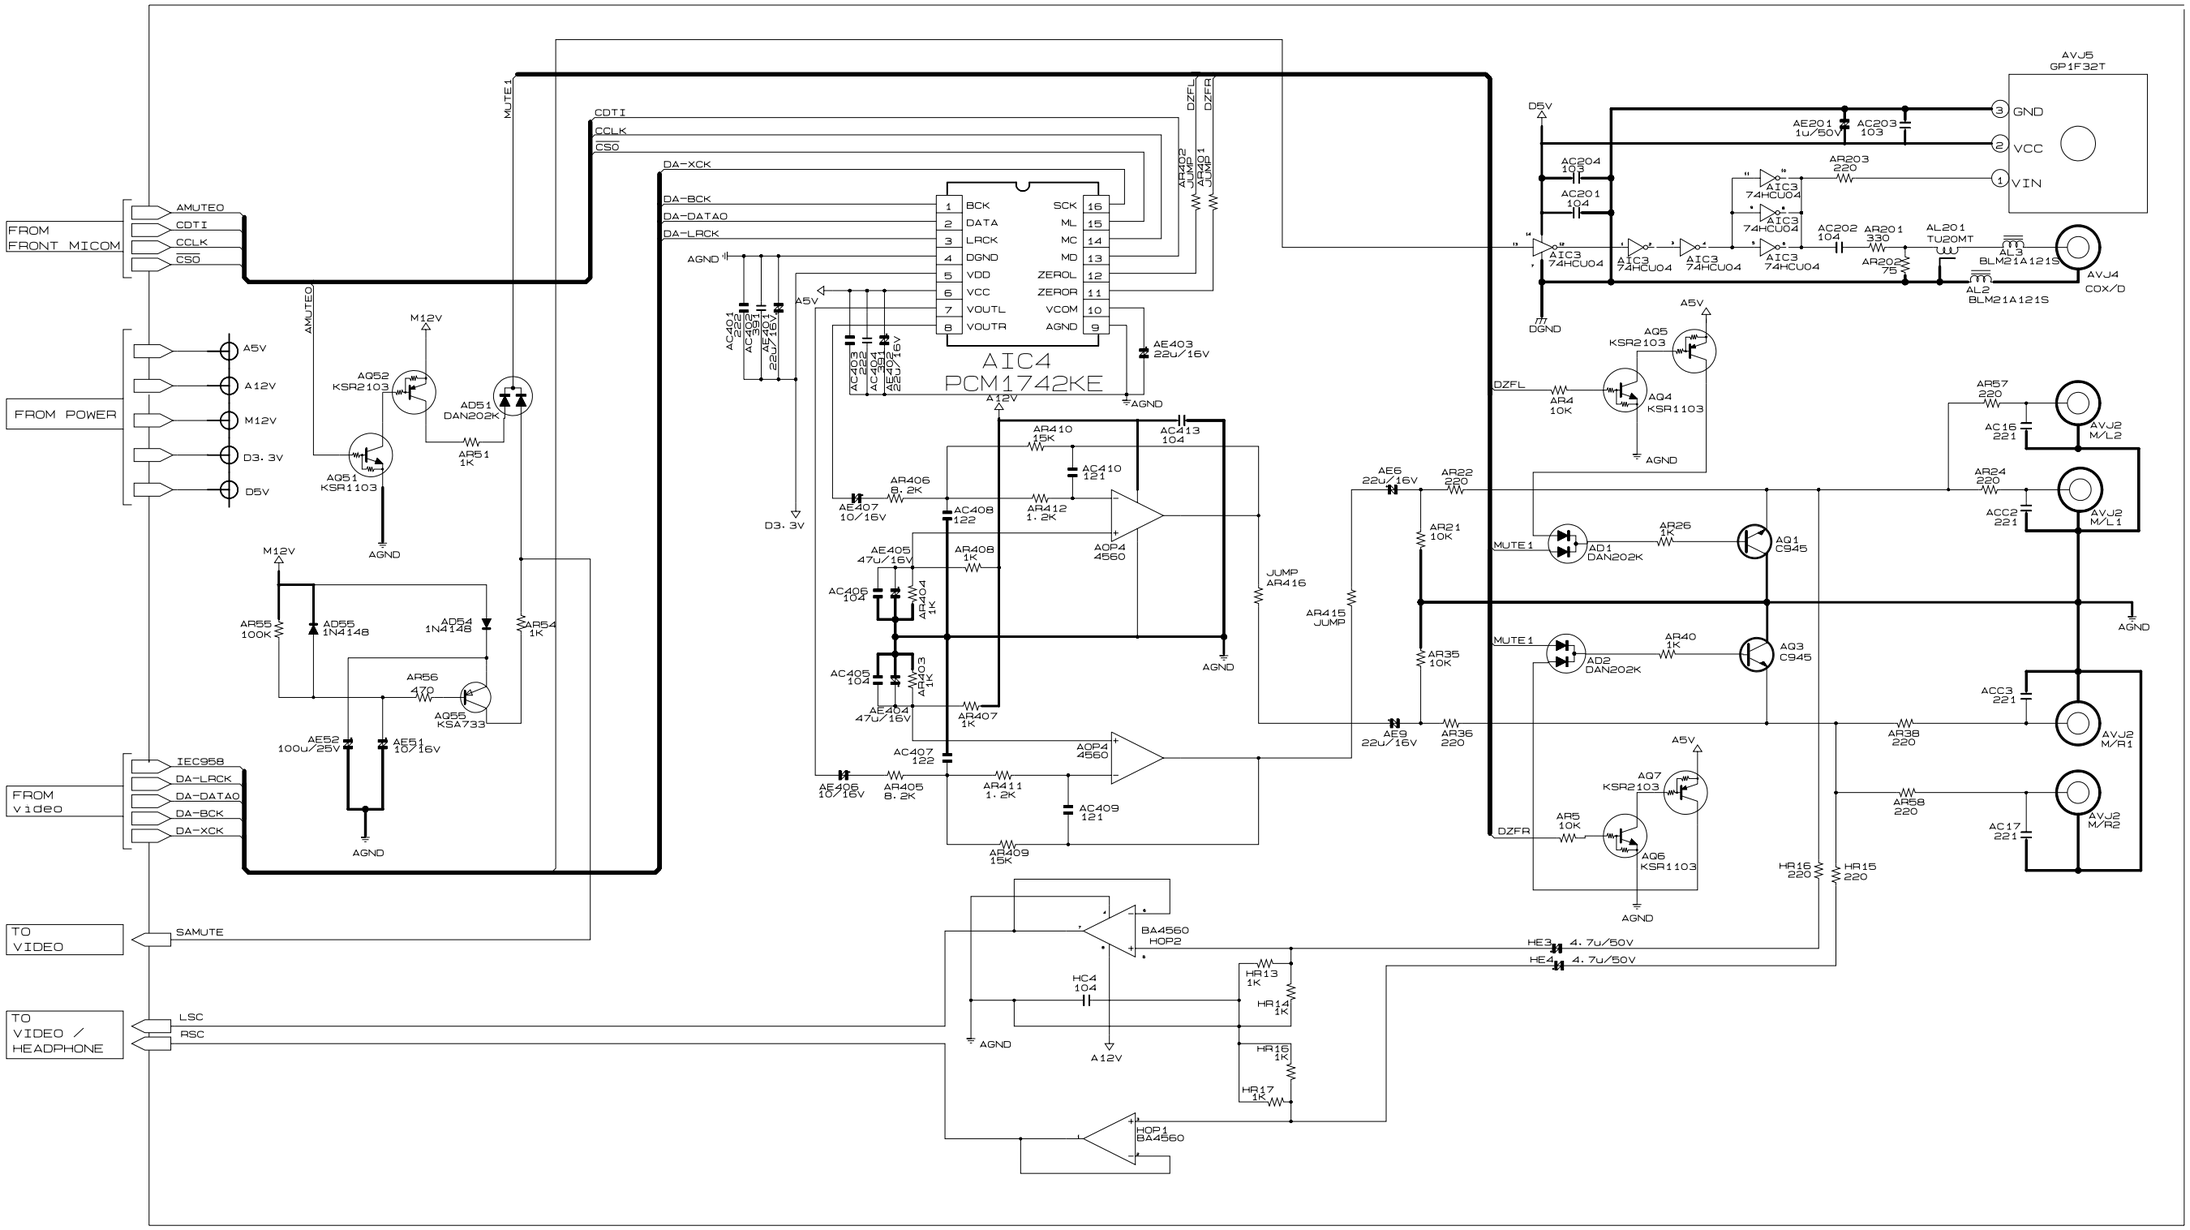

9-12 Headphone (Only for DVD-S324/S324B/S324W/S325/S325B)

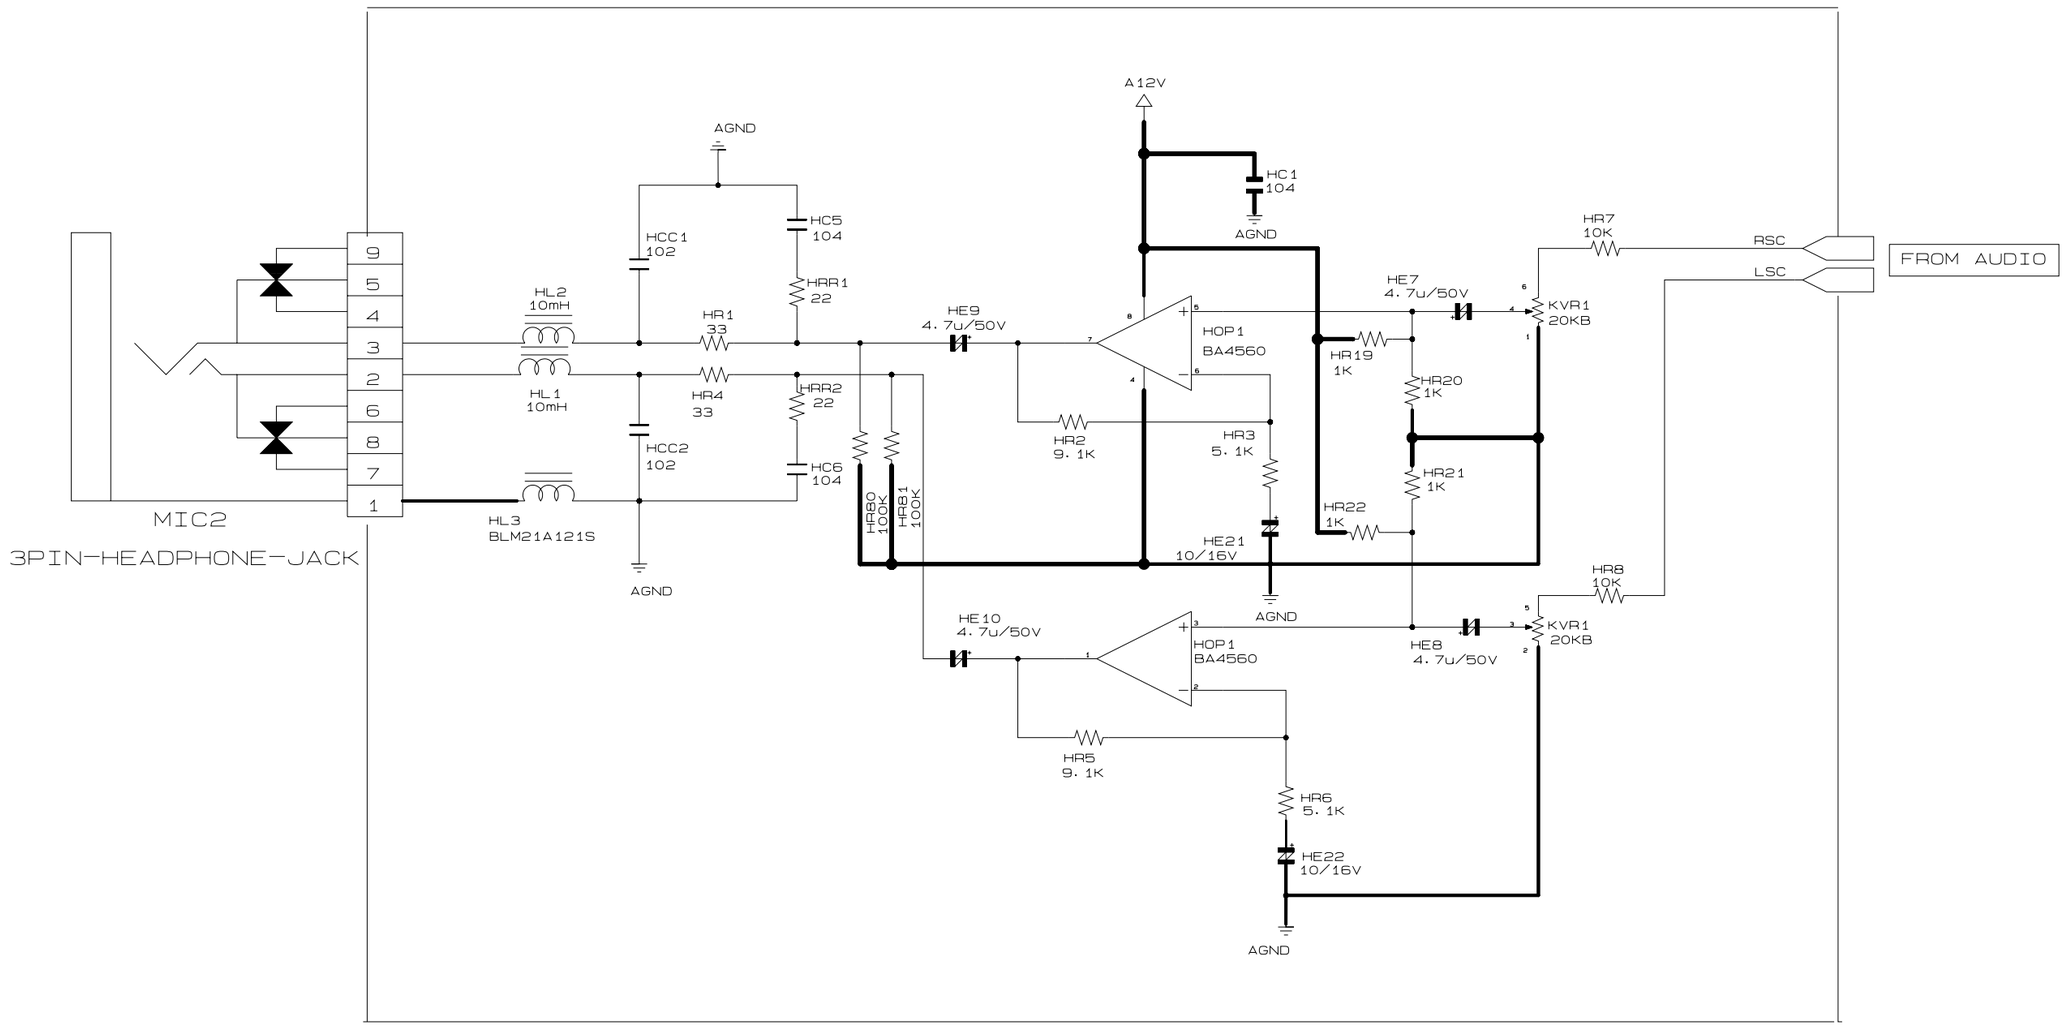
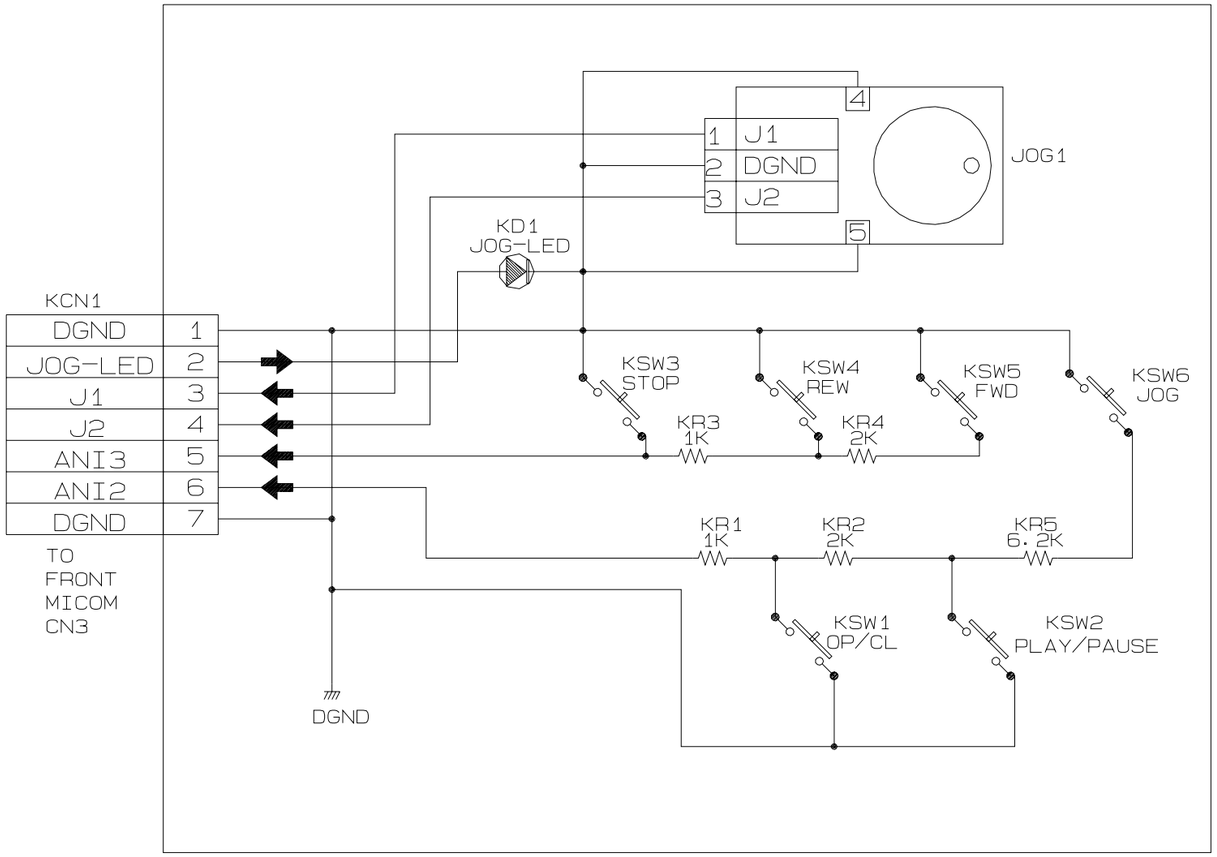
9-13 Key (Only for DVD-S324/S324B/S324W/S325/S325B)